 


# PURE

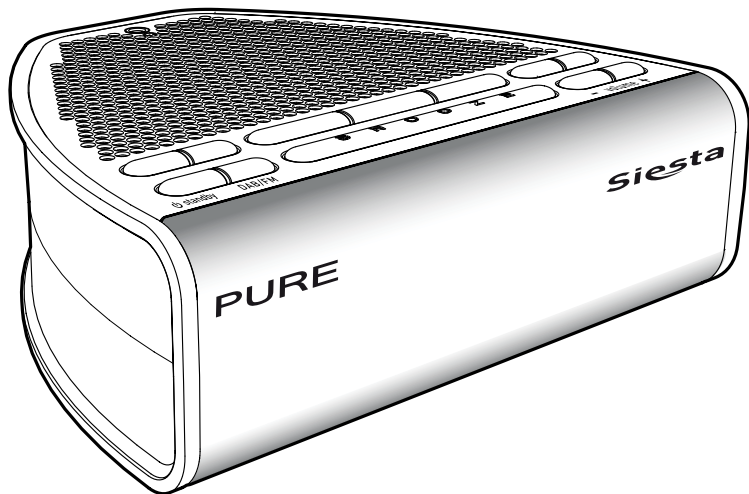

**Owner's manual**



*This manual is printed on 100% recycled  
paper using soya-based inks*

# **Siesta**

DAB & FM Clock Radio

## **Safety instructions**

Keep the radio away from heat sources.  
Do not use the radio near water.  
Avoid objects or liquids getting into the radio.  
Do not remove screws from or open the radio casing.  
Fit the mains adaptor to an easily accessible socket,  
located near the radio and ONLY use the mains power  
adapter supplied.

## **Sicherheitshinweise**

Halten Sie das Radio fern von Heizquellen.  
Benutzen Sie das Radio nicht in der Nähe von Wasser.  
Verhindern Sie, dass Gegenstände oder Flüssigkeiten  
in das Radio gelangen.  
Entfernen Sie keine Schrauben vom Gehäuse und  
öffnen Sie dieses nicht. Schließen Sie das Netzteil  
an eine leicht erreichbare Steckdose in der Nähe des  
Radios an, und benutzen Sie AUSSCHLIESSLICH das  
mitgelieferte Netzteil.

## **Consignes de sécurité**

Tenir la radio éloignée de toute source de chaleur.  
Ne pas utiliser la radio à proximité d'un point d'eau.  
Éviter que des objets ou des liquides ne pénètrent à  
l'intérieur de la radio.  
Ne pas ouvrir le boîtier de la radio ou en enlever les  
vis. Branchez l'adaptateur sur une prise de courant  
facilement accessible, à proximité de la radio et  
utilisez UNIQUEMENT l'adaptateur fourni.

## **Istruzioni di sicurezza**

Tenere la radio lontana da fonti di calore.  
Non utilizzare la radio vicino all'acqua.  
Evitare che oggetti o liquidi penetrino nella radio.  
Non rimuovere le viti né aprire l'involucro della radio.  
Collegare l'adattatore di rete ad una presa della  
corrente facilmente accessibile, situata vicino alla  
radio e utilizzare ESCLUSIVAMENTE l'adattatore di rete  
fornito.

## **Sikkerhedsforskrifter**

Hold radioen på afstand af varmekilder.  
Brug ikke radioen i nærheden af vand.  
Undgå at der kommer genstande eller væske i radioen.  
Fjern ikke skruer fra og åbn ikke radiokabinettet.  
De bør tilslutte strømforsyningen til et lettilgængeligt  
strømuttag tæt på radioen. De bør KUN bruge den  
medfølgende strømforsyning.

## **Veiligheidsinstructies**

Houd de radio uit de buurt van warmtebronnen.  
Gebruik de radio niet in de buurt van water.  
Vermijd dat voorwerpen of vloeistoffen in de radio  
terecht komen. Verwijder geen schroeven uit de  
omkasting van de radio en open het niet. Steek  
de lichtnetadapter in een gemakkelijk toegankelijk  
stopcontact in de buurt van de radio en gebruik  
ALLEEN de meegeleverde spanningsadapter voor het  
lichtnet.

## **Copyright**

Copyright 2007 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

## **Copyright**

Copyright 2007 by Imagination Technologies Limited. Alle Rechte vorbehalten. Kein Teil dieser Publikation darf ohne ausdrückliche und schriftliche Zustimmung von Imagination Technologies Limited in irgendeiner Form (elektronisch, mechanisch, magnetisch, manuell oder auf andere Weise) kopiert, verteilt, übermittelt, überschrieben, in einem Suchsystem gespeichert, in eine andere natürliche oder Computersprache übersetzt oder Dritten zugänglich gemacht werden.

## **Copyright**

Copyright 2007 Imagination Technologies Limited. Tous droits réservés. Aucune partie de la présente publication ne doit être copiée ou diffusée, transmise, transcrite, stockée dans un système de récupération de données ou traduite, que ce soit dans une langue humaine ou dans un langage informatique, sous quelque forme et par quelque moyen que ce soit, électronique, mécanique, magnétique, manuel ou autre, ou encore diffusée auprès de tiers sans autorisation écrite expresse de Imagination Technologies Limited.

## **Copyright**

Copyright 2007 by Imagination Technologies Limited. Tutti i diritti riservati. Nessuna parte della presente pubblicazione può essere copiata o distribuita, trasmessa, trascritta, memorizzata in un sistema di archiviazione, o tradotta in un formato normalmente comprensibile, in qualsiasi forma o con qualsiasi mezzo, elettronico, meccanico, magnetico, manuale o altro, o divulgata a terze parti senza il permesso scritto di Imagination Technologies Limited.

## **Copyright**

Copyright 2007 tilhører Imagination Technologies Limited. Alle rettigheder forbeholdes. Ingen dele af denne publikation må kopieres eller distribueres, transmitteres, omskrives, gemmes i et system, hvor den kan hentes, eller oversættes til menneskeligt forståeligt sprog eller computersprog, i nogen som helst form eller med nogen som helst midler, det være sig elektroniske, mekaniske, magnetiske, manuelle eller på anden måde, eller fremvises til tredje parter uden udtrykkelig, skriftlig tilladelse fra Imagination Technologies Limited.

## **Copyright**

Copyright 2007 door Imagination Technologies Limited. Alle rechten gereserveerd. Geen enkel gedeelte van deze publicatie mag gekopieerd of gedistribueerd, uitgezonden, overgeschreven, opgeslagen in een retrieval system of vertaald in om het even welke menselijke of computertaal, in geen enkele vorm of door geen enkel middel, elektronisch, mechanisch, magnetisch, manueel of anders of bekend gemaakt aan derde partijen zonder de uitdrukkelijke geschreven toestemming van Imagination Technologies Limited.

# Contents

 
<b>Start .....</b>	<b>2</b>
Quick set up .....	2
Overview of controls and connectors.....	3
Symbols on the screen .....	3
<b>Using the radio .....</b>	<b>4</b>
Switching between DAB and FM .....	4
Changing stations .....	4
Using textSCAN™ to pause and control scrolling text.....	4
Changing the information shown on screen .....	5
Storing and selecting presets.....	5
<b>Setting alarms .....</b>	<b>6</b>
Setting an alarm – quick guide .....	6
Setting an alarm – step-by-step guide.....	6
<b>Waking up .....</b>	<b>8</b>
Cancelling an alarm .....	8
Snoozing an alarm .....	8
Cancelling an alarm that you have snoozed.....	8
Changing the alarm snooze time .....	8
<b>Extra features .....</b>	<b>9</b>
Set the sleep timer .....	9
Cancel the sleep timer .....	9
Intellitext.....	9
<b>Options .....</b>	<b>10</b>
Options available in DAB .....	10
Options available in FM .....	11
General options .....	11
<b>Help and specifications .....</b>	<b>12</b>
Secondary and inactive stations.....	12
Troubleshooting .....	12
Technical Specifications .....	12

# Start


Quick set up > Overview of controls and connectors > Symbols on the screen

## Quick set up





- 1 Uncoil the aerial wire and hang it vertically, then connect the mains adapter to the bottom of the unit as shown.

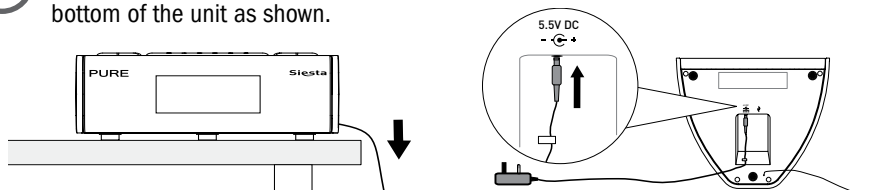

 - 2 Plug the mains adapter into the mains supply and press the **standby** button.

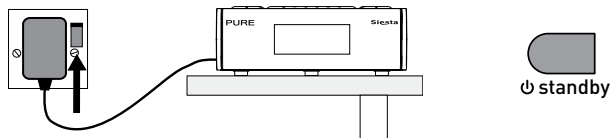

    - 3 Set energy saving mode.  
Press the **select** button when you see the message 'Enable energy saving?'.  
Press **select** again to switch on energy saving mode.





When energy saving mode is switched on, the radio uses less power in standby because it does not collect and store Intellitext messages in standby. It still collects and stores Intellitext messages while the radio is switched on (see page 11).


With energy saving mode switched on, the power consumption of Siesta in standby is less than 1 Watt.

For more information: Intellitext > page 9 energy saving mode > page 11

  - 4 Wait until Siesta completes an Autotune for available radio stations (about a minute).



# Overview of controls and connectors

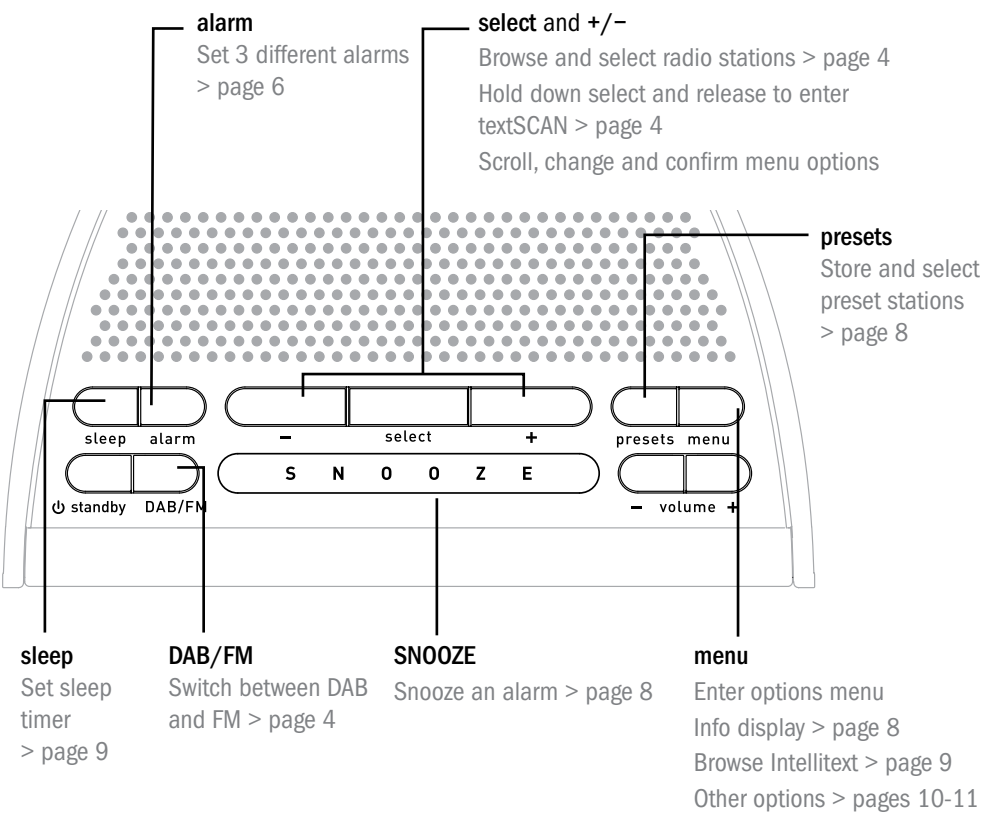 

## Top

3.5mm  
headphone  
socket

## Underneath

USB input socket  
(mini B type) for  
upgrades

5.5V DC  
Power input socket  
for supplied 5.5V DC  
mains adapter

## Symbols on the screen



# Using the radio

DAB/FM > Change stations > Use textSCAN™ > Change info on screen > Use presets

## Switching between DAB and FM

Press the **DAB/FM** button to switch between DAB and FM.



## Changing stations

### When listening to DAB

1. Press the **+/-** buttons to browse through the list of available stations.



2. Press the **select** button to tune.

 
 


### When listening to FM

Press **+/-** to step up or down 0.05 MHz.




Hold and release **+/-** to scan to the next station with a strong signal.




## Using textSCAN™ to pause and control scrolling text

 1. When DAB scrolling text is displayed hold down **select** for 3 seconds to pause the scrolling text.




 2. Press **+/-** to move left and right through the scrolling text. To exit textSCAN press **select**.



## Changing the information shown on screen (menu > Info display)

 1. In DAB or FM, press the **menu** button then press **select** to access the 'Info display' options.



2. Change the current information display option using **+/-** to browse and **select** to choose:


<b>Scrolling text</b>	Info broadcast by most DAB stations and FM (RDS) stations.
<b>Date</b>	Displays the current date below the station name.
<b>Programme type</b>	Content broadcast by the current station, e.g., Pop Music.
<b>Sig. strength</b>	Displays a signal strength meter.
<b>Sig. quality</b>	Displays DAB signal quality: 85 to 100 Good, 70 to 84 OK, 0 to 69 poor.
<b>Bit Rate</b>	Displays DAB signal data rate and a stereo or mono indicator.
<b>Multiplex name</b>	Displays the DAB multiplex in which the current station is broadcast.
<b>Multiplex info</b>	Displays the channel and frequency of the current Multiplex, e.g., 12B.
<b>Stereo mode (FM)</b>	Indicates stereo or mono sound (only available in FM).

## Storing and selecting presets

 Store up to 8 DAB and 8 FM radio stations for easy access to your favourite stations.

### To store a preset

1. Tune to the DAB or FM station you want to store.
2. Press the **presets** button and use **+/-** to scroll to a preset number between 1 and 8.




3. Press and hold the **presets** or **select** button for 3 seconds until you see 'Preset saved' message.



### To select a preset

 
When listening to DAB or FM, press **presets** to access the DAB or FM preset list. Use **+/-** to browse to the stored preset number, e.g. Preset 2, and press **select** to listen.



# Setting alarms


Quick guide > Step-by-step guide > Changing an alarm that you have set

 
## Setting an alarm – quick guide

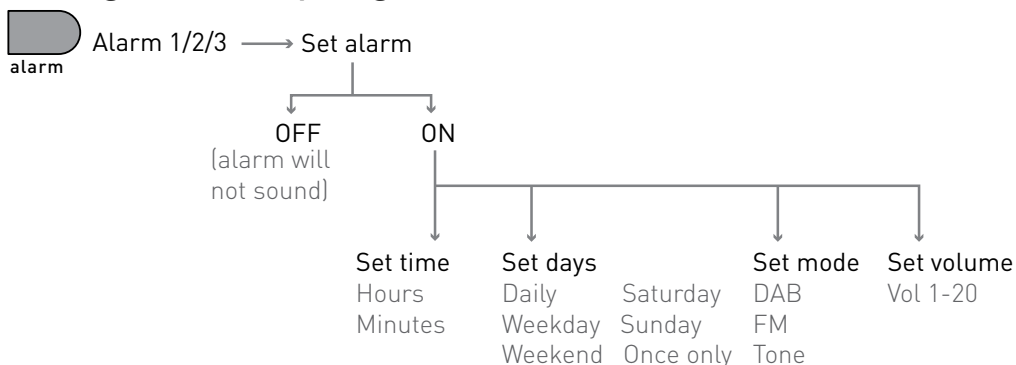


## Setting an alarm – step-by-step guide

Siesta has three alarms which you can set to sound at different times as either DAB, FM or tone alarms. DAB and FM alarms switch your radio on (if in standby) and tune to the DAB or FM station you last listened to; tone alarms sound an alarm tone.

 
1. Press the **alarm** button to access the alarm menu.   
**alarm**
2. Choose either Alarm 1, Alarm 2 or Alarm 3 with **+/-** and **select**.



 3. Select 'Set alarm' and choose 'On' to turn the alarm on.



 4. Select 'Set time' to set the time you want the alarm to sound. Adjust the hours using **+/-** and press **select** to confirm, then adjust the minutes in the same way.

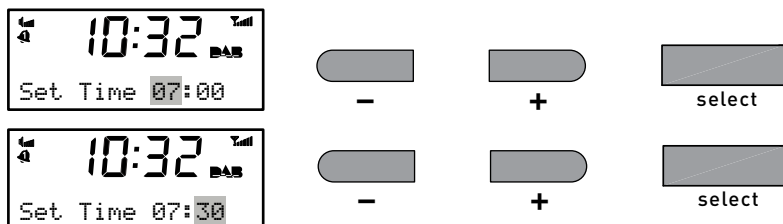




5. Select 'Set days'. Choose when you want the alarm to repeat by pressing +/- to choose and select to confirm. The following options are available:

<b>Daily</b>	Every day.
<b>Weekday</b>	Monday – Friday, every week.
<b>Weekend</b>	Every weekend.
<b>Saturday</b>	Every Saturday.
<b>Sunday</b>	Every Sunday
<b>Once only</b>	The alarm will sound at the time you have selected and not recur.

**Tip**

 
*If you want to set a 'one-off' alarm choose 'Once only'.*

6. Select 'Set Mode' to choose the type of alarm you want: DAB, FM or Tone.




If you select DAB or FM the alarm will tune to the station that was most recently listened to.

 7. Finally, for radio alarms only, set the volume of the alarm from 1 to 20.

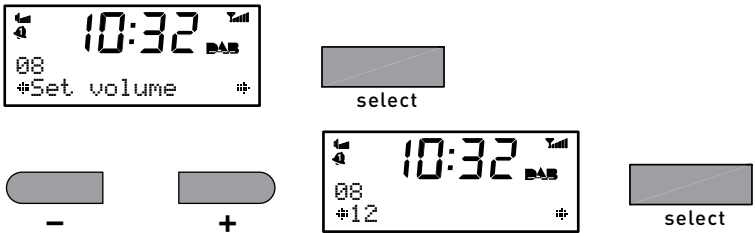

That's it! You can easily see which alarms are currently switched on by looking at the numbered alarm clock icons on the screen, in either active or standby mode. When an alarm is sounding, the alarm clock icon will flash.

 For example:

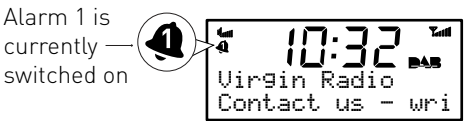

## Changing an alarm that you have set

You can change an existing alarm by pressing **alarm** when Siesta is switched on or in standby mode, selecting the alarm number and changing settings as described above.

# Waking up

Cancel an alarm > Snooze > Cancel a snooze > Change the snooze time

 
## Cancelling an alarm

To cancel a tone alarm



standby

or



select

or



alarm

To cancel a radio alarm




standby

(switches the unit into standby)


## Snoozing an alarm

 To temporarily silence an alarm press the **snooze** button. The alarm will stop. Siesta will return to standby before sounding the alarm again after 9 minutes have elapsed.



## Cancelling an alarm that you have snoozed

 To cancel a snooze countdown and leave the unit in standby, press either the **alarm** or **select** button, or press the **standby** button to turn the radio on and cancel the snooze countdown.




select

or



 alarm




## Changing the alarm snooze time (alarm > Snooze time)

Press **alarm** and scroll to 'Snooze time'. Use **+/-** to change between 5 and 60 minutes and press **select** to confirm.



alarm

 -



select



-




+

# Extra features

 Set the sleep timer > Cancel the sleep timer > Use Intellitext

## Set the sleep timer

The sleep timer switches your radio into standby after a number of minutes has elapsed. Press the **sleep** button and repeat to choose the duration of the sleep timer from 15 to 90 minutes, then press **select** to confirm.

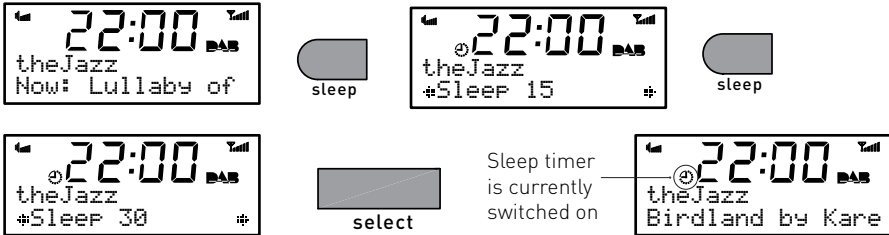

## Cancel the sleep timer

Press and hold **sleep** for three seconds, or press **sleep**, cycle to 'Sleep Off' and press **select**.

 


## Intellitext (menu > Intellitext)

Intellitext\* provides on-demand text information such as sports headlines and news from DAB stations. The text is updated by the broadcasters and stored in your radio while you listen to stations. Intellitext is listed by station and split into categories. For example, the broadcaster may send information on Football, Cricket, Headlines, etc.

### To view Intellitext data (menu > Intellitext > station name)

1. Press **menu** and select 'Intellitext' to view a list of stations for which you have Intellitext information. Select a station and use **+/-** and **select** to view Intellitext categories for that station, e.g. talkSPORT > Football > News. The selected information will scroll across the screen.



2. You can use textSCAN when viewing the text by pressing and holding **select** (page 4).

Intellitext is available for stations that broadcast Intellitext, including Virgin, BBC Radio Five Live and talkSPORT.

# Options

Options available in DAB > Options available in FM > General options



Press **menu** to access the following options. Use **+/-** and **select** to adjust options.

## Options available in DAB

### Intellitext options (*menu > Intellitext > Options*)

#### Set timeout

Choose to delete old Intellitext data after 1 week (default) or 1 day.

#### Clear all

Delete all stored Intellitext data immediately.

### DRC value (*menu > DRC value*)

DRC (Dynamic Range Control) value makes the quieter sounds in a DAB broadcast easier to hear at low volume or in a noisy environment. Check with the broadcasters to find out if they use DRC.

**DRC full** Applies the DRC level as sent with the broadcast.

**DRC half** DRC level is set to half that sent with the broadcast.

**DRC off** Any DRC level broadcast will be ignored.

### Station order (*menu > Station order*)

**Alphanumeric** Lists all stations in alphanumeric (alphabetical) order.

**Active station** Lists active stations first on the station list.

**Multiplex** Lists stations in groups according to their multiplex.

**Trim stn. list** Removes inactive stations (see page 12).

### Autotune (*menu > Tuning > Autotune*)

Scans all DAB Band III and L-Band frequencies for stations and automatically adds any new stations found to the station list. This may take a few minutes. To stop an Autotune press **select**.

## Options available in FM

### **FM stereo mode** (*menu > FM stereo mode*)

Choose from Stereo or Mono (default) – mono may improve audio clarity where stereo signals are weak.

## General options

### **Energy saving** (*menu > Energy saving*)



*This product has a special energy-saving standby mode*

Siesta is designed and manufactured to minimise power consumption when the unit is switched on and to use less than 1 Watt in standby. One way this low power consumption is enabled is by not collecting and storing Intellitext messages when the unit is in standby. You can override this option by switching off energy saving mode, but this will increase standby power consumption. Two options are available:

#### **Energy saving On (the default setting)**

Intellitext will be collected when you have been tuned for a short while to a station that broadcasts Intellitext. Intellitext data is not collected in standby, reducing power consumption.

#### **Energy saving Off**

Siesta collects Intellitext data in standby from the station you last viewed Intellitext data, which increases standby power consumption.

### **Upgrade** (*menu > Upgrade*)

You can upgrade your Siesta using a PC connected to the USB port. Upgrades may be issued to provide enhanced functions or improve performance. To upgrade, select Upgrade and follow the instructions provided with the upgrade software. Register your product and include an e-mail address to receive notification of upgrades or visit our website at [www.pure.com/support](http://www.pure.com/support)

**Note** USB upgrade requires a PC (not Mac) running Windows XP and a suitable USB cable (not included).

### **Clock** (*menu > Clock*)

#### **Clock set**

Manually set the time and date if required. If you have good DAB reception these will automatically be updated from the DAB radio signal.

#### **12/24 Hour set**

Choose 12 hour or 24 hour clock display.

# Help and specifications

Secondary and inactive stations > Troubleshooting > Resetting > Technical Specifications

## Secondary and inactive stations

### *(<</>>) Secondary DAB services*

Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. If a station has secondary services available, the station shows '>>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<<' before its name in the station list.

### *(?) Inactive or unavailable DAB stations*

Inactive or unavailable stations are those which appear on the station list but are not currently available. Inactive stations have a '?' before their name on the station list. If you select a station which has this symbol, your radio tries to tune in or returns to the previous station.

## Troubleshooting

### *Display says 'No stations available'*

Use Autotune (page 10) to search for stations. Try adjusting your aerial or radio position.

### *The screen is very dark*

Check that the light sensor (located beneath the PURE logo) is not obstructed.

### *Receiving new DAB stations that have started broadcasting*

Use Autotune (page 10) to scan for new stations. Any new stations that you can receive will be added to the station list.

### *Resetting your radio*

Resetting your radio removes all presets and stored stations and resets all options to defaults. To reset:

1. Press and hold the **menu** button for three seconds.
2. Press **select** to confirm the reset or press no buttons to cancel the reset.

## Technical Specifications

DAB	Digital radio with full Band III, L-Band and FM reception. ETS 300 401 compliant and capable of decoding all DAB transmission modes 1-4 up to and including 256 kbps. Future upgrade supported for DAB+.
Frequency ranges	DAB Band III 174-240 MHz, DAB L-Band 1452-1491 MHz, FM 87.5-108 MHz.
Audio	2.75" full-range speaker. 1.7W RMS amplifier. Active speaker equalization filter.
Input connectors	5.5V DC power adaptor socket (230V supplied). USB connector for upgrades.
Output connectors	3.5mm stereo output for headphones.
LCD Display	16 x 2 characters, plus additional function icons. Auto-dimming backlight.
Mains power	230V AC to 5.5V (1A) DC external power adapter (supplied).
Power consumption	Standby: less than 1 Watt. Active: 2 Watts average dependent on use.
Approvals	CE marked. Compliant with the EMC and Low Voltage Directives (89/336/EEC and 73/23/EEC).
Aerial	Wire aerial attached.
Dimensions (mm)	170 wide x 145 deep x 62 high.



Components are selected to  
minimise environmental impact







## Trademarks

Siesta, textSCAN, Intellitext, EcoPlus, PURE, the PURE logo, PURE Digital, the PURE Digital logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. The 'DAB Digital Radio' logo and the stylised 'r' mark ® and © Digital One Limited. All other product names are trademarks of their respective companies. Version 1. June 2007.

## Warenzeichen

Siesta, textSCAN, Intellitext, EcoPlus, PURE, das PURE Logo, PURE Digital, das PURE Digital Logo, Imagination Technologies und das Imagination Technologies Logo sind Warenzeichen oder eingetragene Warenzeichen von Imagination Technologies Limited. Alle anderen Produktnamen sind Warenzeichen ihrer jeweiligen Besitzer. Version 1. Juni 2007.

## Marques commerciales

Siesta, textSCAN, Intellitext, EcoPlus, PURE, le logo PURE, PURE Digital, le logo PURE Digital, Imagination Technologies et le logo Imagination Technologies sont des marques commerciales ou des marques déposées de Imagination Technologies Limited. Tous les autres noms de produits sont des marques commerciales de leurs détenteurs respectifs. Version 1 er juin 2007.

## Marchi

Siesta, textSCAN, Intellitext, EcoPlus PURE, il logo PURE, PURE Digital, il logo PURE Digital, Imagination Technologies e il logo Imagination Technologies sono marchi o marchi registrati di Imagination Technologies Limited. Tutti gli altri nomi di prodotti sono marchi di proprietà delle rispettive società. Versione 1 giugno 2007.

## Varemærker

Siesta, textSCAN, Intellitext, EcoPlus, PURE, PURE-logoet, PURE Digital, PURE Digital-logoet, Imagination Technologies og Imagination Technologies-logoet er varemærker eller registrerede varemærker, der tilhører Imagination Technologies Limited. Alle andre produktnavne er varemærker, der tilhører deres respektive virksomheder. Version 1. Juni 2007.

## Handelsmerken

Siesta, textSCAN, Intellitext, EcoPlus, PURE, het PURE logo, PURE Digital, het PURE Digital logo, Imagination Technologies en het Imagination Technologies logo zijn handelsmerken of geregistreerde handelsmerken van Imagination Technologies Limited. Alle andere productnamen zijn handelsmerken van hun respectieve firma's. Versie 1 juni 2007.

## Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

## Ausschlusshinweis

Imagination Technologies Limited gewährt keine Garantien für den Inhalt dieses Dokuments und lehnt insbesondere implizierte Garantien für die allgemeine Gebrauchstauglichkeit bzw. die Eignung für spezielle Zwecke ab. Weiterhin behält sich Imagination Technologies Limited das Recht vor, diese Publikation von Zeit zu Zeit zu überarbeiten und zu ändern, ohne dass daraus eine Verpflichtung für Imagination Technologies Limited entsteht, irgendeine Person oder Organisation von solchen Änderungen in Kenntnis zu setzen.

## Avis de non-responsabilité

Imagination Technologies Limited refuse toute représentation ou garantie vis-à-vis du contenu du présent document et refuse spécifiquement toute garantie implicite de valeur marchande ou d'adéquation à un usage spécifique. En outre, Imagination Technologies Limited se réserve le droit de réviser la présente publication et d'y apporter des modifications, quand elle le souhaite, sans obligation de sa part de notifier toute personne ou organisation desdites révisions ou modifications.

## Dichiarazione di non responsabilità

Imagination Technologies Limited non si assume alcuna responsabilità rispetto al contenuto del presente documento, in particolare non riconosce nessuna garanzia implicita di commerciabilità o idoneità per uno scopo specifico. Inoltre, Imagination Technologies Limited si riserva il diritto di revisionare la presente pubblicazione e di apportarvi modifiche periodiche senza alcun obbligo di notifica a qualsiasi persona o organizzazione.

## Ansvarsfraskrivelse

Imagination Technologies Limited afgiver ingen garantier eller erklæringer med hensyn til indholdet af dette dokument og fralægger sig i særdeleshed eventuelle stilltende garantier for salgbarhed eller egnethed til et bestemt formål. Endvidere forbeholder Imagination Technologies Limited sig ret til at revidere denne publikation og foretage ændringer fra tid til anden, uden at Imagination Technologies Limited er forpligtet til at underrette nogen person eller organisation om sådanne revideringer eller ændringer.

## Vrijwaring

Imagination Technologies Limited geeft geen verklaring of garanties met betrekking tot de inhoud van dit document en wijst specifiek elke verantwoordelijkheid af met betrekking tot om het even welke onuitgesproken garanties naar verhandelbaarheid of geschiktheid voor enig bijzonder doel. Daarenboven behoudt Imagination Technologies Limited zich het recht voor om deze publicatie te reviseren en af en toe veranderingen aan te brengen zonder de verplichting voor Imagination Technologies Limited om personen of organisaties van deze revisies of veranderingen op de hoogte te brengen.

## Disposal of Waste Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

## Entsorgung von gebrauchten elektrischen und elektronischen Geräten



Das Symbol auf dem Produkt oder seiner Verpackung weist darauf hin, dass dieses Produkt nicht als normaler Haushaltsabfall zu behandeln ist, sondern an einer Annahmestelle für das Recycling von elektrischen und elektronischen Geräten abgegeben werden muss. Durch Ihren Beitrag zum korrekten Entsorgen dieses Produkts schützen Sie die Umwelt und die Gesundheit Ihrer Mitmenschen. Umwelt und Gesundheit werden durch falsches Entsorgen gefährdet. Materialrecycling hilft den Verbrauch von Rohstoffen zu verringern. Weitere Informationen über das Recycling dieses Produkts erhalten Sie von Ihrer Gemeinde, den kommunalen Entsorgungsbetrieben oder dem Geschäft, in dem Sie das Produkt gekauft haben.

## Trattamento del dispositivo elettrico od elettronico a fine vita



Questo simbolo sul prodotto o sulla confezione indica che il prodotto non deve essere considerato come un normale rifiuto domestico, ma deve invece essere consegnato ad un punto di raccolta appropriato per il riciclo di apparecchi elettrici ed elettronici. Assicurandovi che questo prodotto sia smaltito correttamente, voi contribuirete a prevenire potenziali conseguenze negative per l'ambiente e per la salute che potrebbero altrimenti essere causate dal suo smaltimento inadeguato. Il riciclaggio dei materiali aiuta a conservare le risorse naturali. Per informazioni più dettagliate circa il riciclaggio di questo prodotto, potete contattare l'ufficio comunale, il servizio locale di smaltimento rifiuti oppure il negozio dove l'avete acquistato.

## Traitement des appareils électriques et électroniques en fin de vie



Ce symbole, apposé sur le produit ou sur son emballage, indique que ce produit ne doit pas être traité avec les déchets ménagers. Il doit être remis à un point de collecte approprié pour le recyclage des équipements électriques et électroniques. En s'assurant que ce produit est bien mis au rebut de manière appropriée, vous aiderez à prévenir les conséquences négatives potentielles pour l'environnement et la santé humaine. Le recyclage des matériaux aidera à conserver les ressources naturelles. Pour toute information supplémentaire au sujet du recyclage de ce produit, vous pouvez contacter votre municipalité, votre déchetterie ou le magasin où vous avez acheté le produit.

## Bortskaffelse af elektriske og elektroniske produkter



Hvis dette symbol findes på produktet eller på emballagen betyder det, at det pågældende produkt ikke må bortskaffes som almindeligt husholdningsaffald. Du skal i stedet aflevere det på et indsamlingssted, så det elektriske og elektroniske udstyr kan blive genbrugt. Når du bortskaffer produktet korrekt, hjælper du med at forhindre de mulige negative påvirkninger af miljøet eller sundheden, der kan opstå, hvis produktet bortskaffes på upassende vis. Genbrug af materialer er med at bevare naturens ressourcer. Yderligere oplysninger om genbrug af produktet fås på kommunen, på genbrugscentralen eller i den butik, hvor du købte produktet.

## Afdanken van oude elektrische en elektronische toestellen



Het symbool op het product of op de verpakking geeft aan dat dit product niet wordt behandeld als huishoudelijk afval. Het moet worden binnengebracht bij een inzamelpunt voor de recyclage van elektrische en elektronische toestellen. Door dit product op de juiste wijze af te danken, kunt u potentieel negatieve gevolgen voor het milieu en de mens voorkomen, die het gevolg kunnen zijn van het verkeerd verwerken van dit product. De recyclage van materialen helpt de natuurlijke grondstoffen te sparen. Voor informatie over de recyclage van dit product kunt u contact opnemen met uw gemeentebestuur, uw afvalverwerkingsdienst of de winkel waar u het toestel heeft gekocht.

## Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please return your warranty card or visit [www.pure.com/register](http://www.pure.com/register) to register your product with us. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual.

## Garantie-Informationen

Imagination Technologies Ltd. garantiert dem Endbenutzer, dass dieses Produkt für die Dauer von zwei Jahren ab Kaufdatum bei normalem Gebrauch frei von Schäden an Material oder Verarbeitung ist. Diese Garantie umfasst Ausfälle aufgrund von Herstellungs- und Konstruktionsfehlern; sie gilt nicht für Unfallschäden, wie auch immer verursacht, Verschleiß, Fahrlässigkeit und Veränderung oder Reparatur durch von uns nicht autorisierte Personen. Senden Sie Ihre Garantiekarte ein oder registrieren Sie Ihr Produkt bei uns unter [www.pure.com/register](http://www.pure.com/register). Sollten Sie mit Ihrem Gerät ein Problem haben, wenden Sie sich an Ihren Verkäufer oder den PURE Support. Die Adresse finden Sie auf der Rückseite dieser Bedienungsanleitung.

## Garantie

Imagination Technologies Ltd. garantit à l'utilisateur que le présent produit est exempt de défauts en termes de matériaux et de main-d'œuvre, dans le cadre d'une utilisation normale, pour une période de deux ans à compter de la date d'achat. La présente garantie couvre les pannes dues à un défaut de conception ou de fabrication ; elle ne prend pas en compte les dommages accidentels, quelle que soit leur cause, l'usure normale du produit, ainsi que tous dommages dus à la négligence, à la modification, au réglage ou à la réparation effectuée(e) sur l'appareil sans notre autorisation. Veuillez renvoyer votre carte de garantie ou visiter le site [www.pure.com/register](http://www.pure.com/register) pour enregistrer votre produit auprès de nos services. En cas de problème avec votre appareil, veuillez contacter votre fournisseur ou le centre d'assistance PURE, à l'adresse indiquée au dos du présent manuel.

## Informazioni sulla garanzia

Imagination Technologies Ltd. garantisce all'utente finale che il presente prodotto è esente da difetti di materiale e fabbricazione in condizioni normali di utilizzo per un periodo di due anni a partire dalla data di acquisto. La presente garanzia copre i danni dovuti a difetti di fabbricazione o progettazione; non si applica in casi quali danni accidentali, in qualsiasi modo siano stati provocati, usura, negligenza, regolazione, modifica o riparazione non autorizzate. Restituire la scheda della garanzia oppure visitare il sito [www.pure.com/register](http://www.pure.com/register) per registrare il prodotto. In caso di problemi relativi all'unità, contattare il proprio fornitore oppure contattare il Supporto tecnico PURE all'indirizzo indicato sul retro del presente manuale.

## Garantioplysninger

Imagination Technologies Ltd. garanterer over for slutbrugeren, at dette produkt ikke er fejlbehæftet, hvad angår materialer og håndværksmæssig udførelse ved normal brug i to år fra købsdatoen. Denne garanti dækker sammenbrud, der skyldes fremstillings- eller designfejl. Den dækker ikke i tilfælde, hvor enheden beskadiges som følge af hændeligt uheld, uanset hvordan dette sker, samt slitage, uagtsomhed, justering, ændring eller reparation, som ikke er godkendt af os. Du bedes returnere garantikortet eller besøge [www.pure.com/register](http://www.pure.com/register) for at registrere produktet hos os. Hvis der skulle opstå problemer med enheden, bedes du kontakte leverandøren eller PURE Support på adressen, der er angivet på bagsiden af denne vejledning.

## Informatie over de waarborg




Imagination Technologies Ltd. waarborgt de eindgebruiker dat dit product vrij is van defecten in materialen en werkuren bij normaal gebruik voor een duur van twee jaar vanaf de datum van aankoop. Deze garantie dekt defecten door productie- of ontwerpfouten; het is niet van toepassing in gevallen als accidentele schade, hoe ook veroorzaakt, slijtage, onachtzaamheid, instelling, wijziging of reparatie die door ons niet werd goedgekeurd. Gelieve uw garantiekaart terug te sturen of bezoek [www.pure.com](http://www.pure.com) om uw product bij ons te registreren. Indien u een probleem hebt met uw apparaat, gelieve uw leverancier te contacteren of contacteer PURE Support op het adres op de achterzijde van deze handleiding.

# www.pure.com

PURE Digital  
Imagination Technologies Ltd.  
Home Park Estate  
Kings Langley  
Herts, WD4 8DH  
UK

 +44 (0)1923 277477 support  
+44 (0)1923 277488 sales  
 +44 (0)1923 270188  
 support@pure.com  
sales@pure.com

PURE Digital  
Karl-Marx Strasse 6  
64589 Stockstadt/Rhein  
GERMANY

 +49 (0)6158 878872 sales  
 +49 (0)6158 878874  
 sales\_gmbh@pure.com

PURE Digital - Vertrieb über:  
TELANOR AG  
Unterhaltungselektronik  
Bachstrasse 42  
4654 Lostorf  
SCHWEIZ/SWITZERLAND

 +41 (0)62 285 95 95 sales  
 +41 (0)62 285 95 85  
 info@telanor.ch  
www.telanor.ch



**EcoPlus**



**Siesta is a member of the PURE EcoPlus™ product family. All EcoPlus products are designed and manufactured to minimise their environmental impact.**

- Documentation is printed on 100% recycled paper using soya-based ink.
- The retail carton protecting your product is printed on at least 70% recycled card finished using a water-based varnish and sized for maximum transport efficiency.

***For more information please visit [www.pure.com/ecoplus](http://www.pure.com/ecoplus)***

*Powered by*



**Imagination**  
TECHNOLOGIES

# PURE

**12W54**

